



REPLACING STEEL CHAIN LINKS WITH BREAKAWAY NYLON PINS

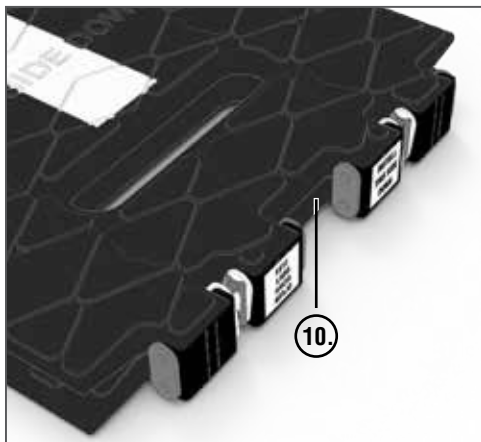


STEP 1

Place your **RoadQuake TPRS** (#10) on a table or any other large, elevated, flat surface to allow yourself maximum space and ease of access. Be sure your **RoadQuake TPRS** (#10) is folded and you have complete access to the hinge.

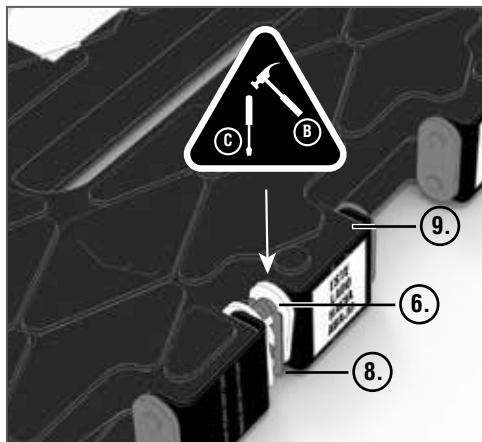


STEP 2

Take the **Flat Blade Screw Driver** (C) and place it on the top of the **Locking Clip** (#8). Take the **Hammer** (B) and tap the top of the **Flat Blade Screw Driver** (C) until the **Locking Clip** (#8) releases from the **Metal Chain Link** (#6). Repeat on the other three **Locking Clips** (#8) on the **RoadQuake TPRS Tabs** (#9).

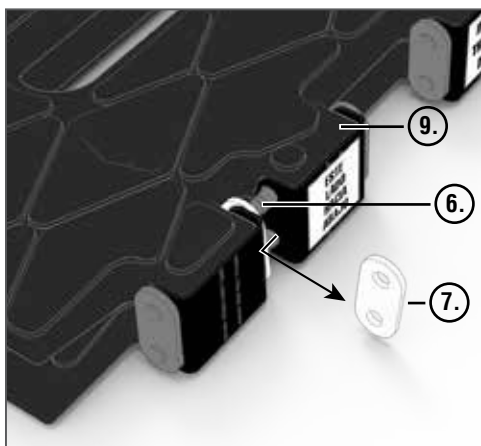

STEP 3


Take the **Needle Nose Pliers** (A) and slide the **Outer Chain Plate** (#7) off the **Metal Chain Link** (#6). Repeat on the other three **Outer Chain Plates** (#7) on the **RoadQuake TPRS Tabs** (#9).

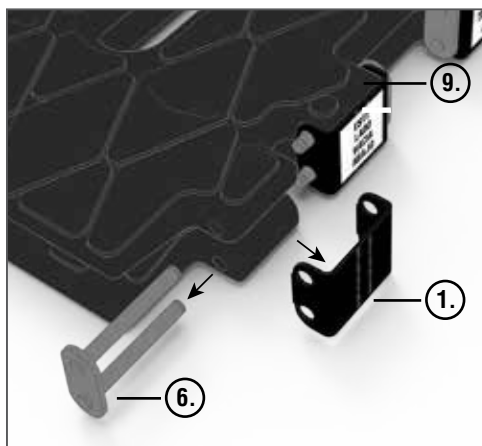

STEP 4


Take the **Needle Nose Pliers** (A) and grab the flat side of the **Metal Chain Link** (#6). Slide it out of the holes in the TPRS tabs. Then grab the **Bracket** (#1) with the **Needle Nose Pliers** (A) and pull it off. If the **Bracket** (#1) shows bending or heavy wear, replace with a new **Bracket** (#1). Check the **RoadQuake TPRS Tabs** (#9) integrity for rips. If there are rips on the **RoadQuake TPRS Tabs** (#9), rotate that TPRS section around to the unused side.

ASSEMBLY OF ROADQUAKE® TPRS HINGE SECTION

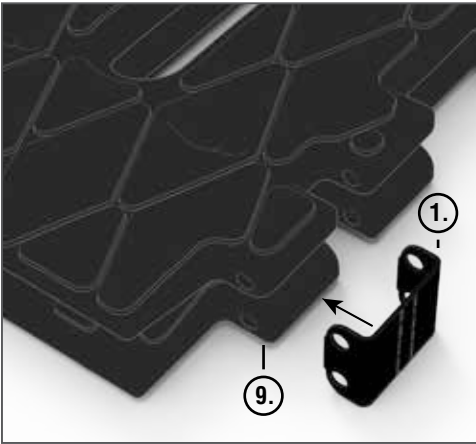


STEP 1

Add the **Safety Stickers (Spanish/English)** (#4 & 5) to two of the **Brackets** (#1). Take the new **Bracket** (#1) and place it on the TPRS Tab. Make sure the holes on the **Bracket** (#1) match up with the holes on the **RoadQuake TPRS Tabs** (#9). Repeat for the other three sets of **RoadQuake TPRS Tabs** (#9).

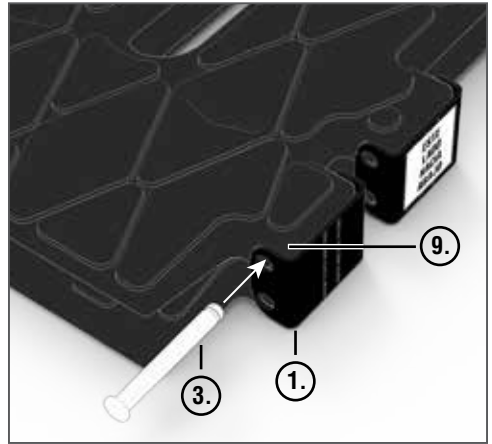


STEP 2

Push the flat side of the **Breakaway Nylon Pins** (#3) through the hole on the **Bracket** (#1) and the **RoadQuake TPRS Tabs** (#9). Repeat for the other three sets of **RoadQuake TPRS Tabs** (#9).

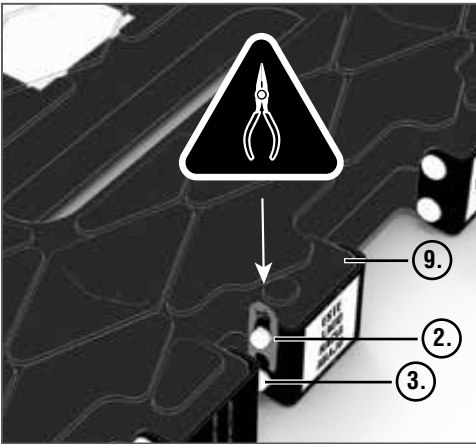

STEP 3

Take the **Needle Nose Pliers** (A) and grab the top tab of the **Locking Clips** (#2). Push the top of the tab until it clicks into place around the **Breakaway Nylon Pins** (#3). Repeat for the other three sets of **RoadQuake TPRS Tabs** (#9).

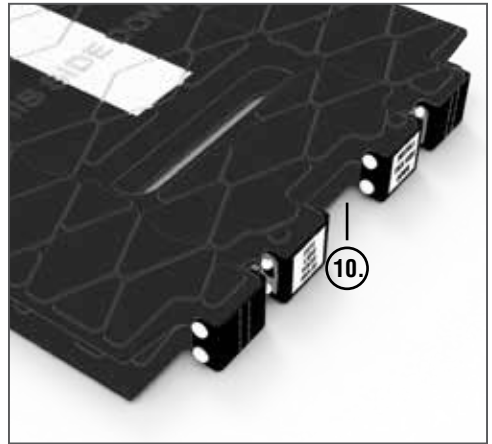

STEP 4

Unfold your **RoadQuake TPRS** (#10). Your **RoadQuake TPRS** (#10) should be flat. If the hinge is not flat, refold, and remove all parts and reassemble.

Follow us on:

